

This file provided by

INFINITY

d a t a c o r p

Switch to Infinity Data Corp for your processing needs! Infinity offers great rates, excellent customer support and a wide range of payment processing solutions.

<http://www.infinitydata.com/>

Call Today!
866 746 8931



Nurit 3020

Optional Battery Functions

3020 Battery Saver

**FUNCTION
DESCRIPTION**

This menu gives two options for the battery.

STEP	ACTION	DISPLAY
1.	From the Main Menu Press [3] to access Merchant Options	MENU SCREEN: 1.Reports 2.Merch. Params 3.Merch. Option
2.	Press [5]	MERCH. OPTIONS: 1.Paper Type 2.No-Paper Mode 3.Buzzer Set
3.	Press the number corresponding with your selection.	BATTERY SAVER ~ON: 1. Off 2. Auto Off Only NOTE: SEE LIST OF DEFINITIONS BELOW
4.	PRESS [ENTER]	ARE YOU SURE? ENTER=YES,ESC=NO
5.	If [2] was selected: The default delay is 60 seconds, press [ENTER] to accept or enter the desired delay time and then press [ENTER] .	IDLE TIME: [sec] 60
6.	Stop.	

OPTION	DEFINITION
Off	This option turns the battery saver off.
Auto Off Only	The terminal will shut off after the specified amount of time.

3020 Battery Test

FUNCTION DESCRIPTION Test the Battery Status in the NOS Menu.

STEP	ACTION	DISPLAY
1.	From the Main Menu press [4] [MENU/ESC], [VOID] and [ENTER] simultaneously.	CREDIT SALE 3001 NOS: 1.Back to PROG>
2.	Press [6]	CREDIT SALE 3001 NOS: 6.Service menu>
3.	Press [ENTER]	CREDIT SALE SERVICE MENU: 1.Hardware test
4.	Press [ENTER]	CREDIT SALE HARDWARE TEST: 1.Rtc test
5.	Press [6]	CREDIT SALE HARDWARE TEST: 6.Charger/Batt.
6.	Press [ENTER]	CREDIT SALE CHARGER/BATT: 1.Battery Test
7.	Press [ENTER] <u>Note:</u> Display will reflect current battery status.	CREDIT SALE AC POWER OK ! GOOD BATTERY
8.	Press [MNU/ESC] five times the [ENTER] to return to idle prompt.	CREDIT SALE ACCOUNT -->
9.	Stop.	

3020 Status Bar

**FUNCTION
DESCRIPTION**

This function turns the status bar display on and off.

STEP	ACTION	DISPLAY
1.	From the Main Menu Press [5] to access System Options	MENU SCREEN: 1.Reports 2.Merch. Params 3.Merch. Option
2.	Using the down arrow [▼], scroll down to 12.Status Bar.	SYSTEM OPTIONS: 1.Set Time/Date 2.Edit PIN Key 3.Sel. Mstr Key
3.	Press [ENTER]	SYSTEM OPTIONS: 10.PinPad func. 11.PinPad Config 12.Status Bar
4.	Press [1] to disable status bar or [2] to enable status bar.	STATUS BAR: 1.OFF 2.ON
5.	Stop.	

Battery Status:




Terminal is working off Battery Power. Dark area indicates the battery charge level.



Battery is charging using an external power source. Fast Charge takes two hours to fully charge the battery.



Battery is fully charged. It is currently on a trickle charge maintaining it's level using an external power source.

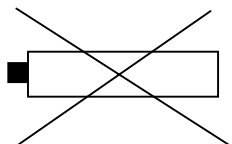

Battery is fully discharged and must be charged before use.